

Actuator Power Control



APC®

The APC receives encoded data from the Survey Electronics Assembly and changes it in order to activate the transmitter and send downhole data to surface.

ACTUATOR

